

L1: Left Bumper
 L2: Left Trigger
 R1: Right Bumper
 LL: Logic Lights
 HP: Holo Projector

Home: Turn on controller
 Home + L1 + R1: Turn off controller

Back: Enable/Disable Auto Mode

Left: Turn Dome Left
 Right: Turn Dome Right
 Press: Enable/Disable HP

Up + R1: Volume Up
 Down + R1: Volume Down

Up + L1: LL Brightness Up
 Down + L1: LL Brightness Down

Up: Move Forward
 Down: Move Backward
 Left: Turn Left
 Right: Turn Right
 Press: Change Drive Speed

Start: Enable/Disable Movement (Right stick)

X: Random Track 25 - 31 / Random LL
 X + L1: Track 5 / LL 5 (Leia) / HP 9 (Leia)
 X + L2: Track 4 / LL 4
 X + R1: Track 12 / Random LL

Y: Random Track 13 - 16 / Random LL
 Y + L1: Track 8 / Random LL
 Y + L2: Track 2 / Random LL
 Y + R1: Track 9 / Random LL

B: Random Track 32 - 51
 B + L1: Track 7 / Random LL
 B + L2: Track 3 / Random LL
 B + R1: Track 10 / LL 9 (bargraph) / HP 1 (Disco)

A: Random Track 17 - 24 / Random LL
 A + L1: Track 6 / LL 6 / HP 11 (system failure)
 A + L2: Track 1 / LL 1 (alarm) / HP 3 (alarm)
 A + R1: Track 11 / LL 11 (alarm 2)



Tracks

1 SCREAM2	11 Emperor	21 MISC17	31 OOH7	41 SENT10	51 SENT20
2 CHORTLE	12 Chorus	22 MISC25	32 SENT1	42 SENT11	52 HUM19
3 DOODOO	13 ALARM3	23 MISC30	33 SENT2	43 SENT12	53 HUM20
4 WOLFWSTL	14 ALARM5	24 MISC34	34 SENT3	44 SENT13	
5 LEIA	15 ALARM7	25 OOH1	35 SENT4	45 SENT14	
6 SHORTCKT	16 ALARM8	26 OOH2	36 SENT5	46 SENT15	
7 PATROL1	17 MISC3	27 OOH3	37 SENT6	47 SENT16	
8 ANNOYED	18 MISC7	28 OOH4	38 SENT7	48 SENT17	
9 Theme	19 MISC14	29 OOH5	39 SENT8	49 SENT18	
10 Cantina	20 MISC16	30 OOH6	40 SENT9	50 SENT19	

Notes

- * Everything (including auto mode) is disabled if controller loses power or goes out of range.
- * LED ring around the Home button indicates speed setting.